



# The Parameters on the lower knob

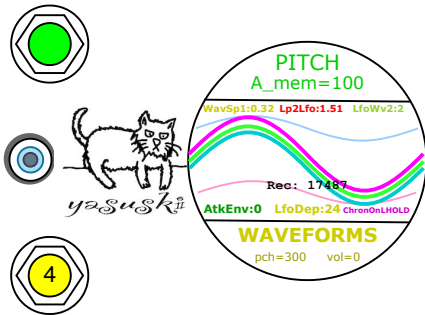


The lower knob is mainly assigned to the selectors for the audio source or the parameters for the sound effect controllers.

The fundamental position is the normal playback mode.

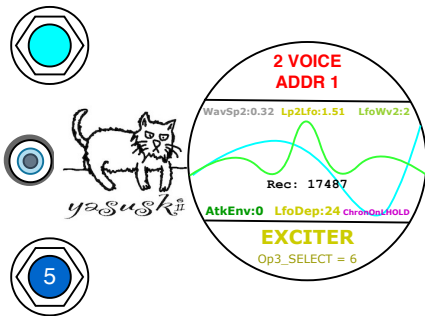


Click the lower knob then the parameter is moved to : Op3 / Exciter mode.

The function is switched by clicking the upper knob.

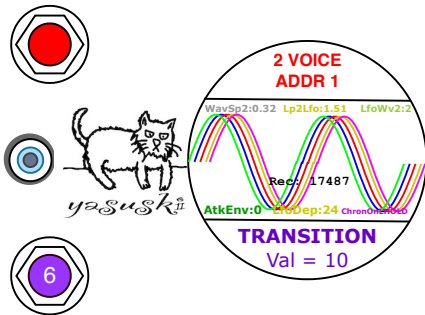


Click the lower knob then the parameter is moved to : the Transition Distance controller.

The value is changed by turning the lower knob.

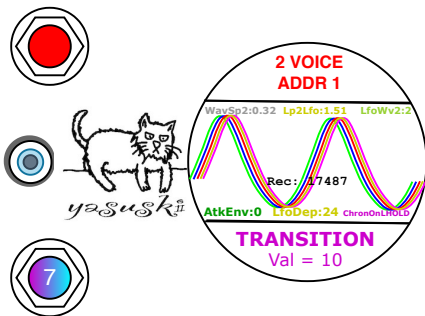

Click the lower knob then the parameter is moved to : the Transition Waveform switcher.

The waveform is switched by turning the lower knob.

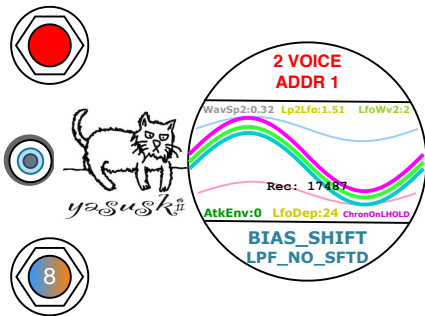

Click the lower knob then the parameter is moved to : the LPF / HPF / Distortion / USB\_MIDI selector.

The status is switched by turning the lower knob.