 
 


AutoFade Mode

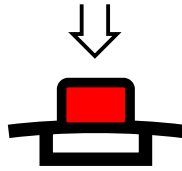

 
The top switch on the right is working as follows:

Hold: Start/Stop the Auto Fade mode

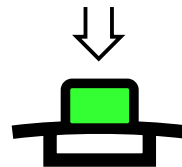


The top switch on the left is working as follows:

Single click: Start/Stop AM modulation

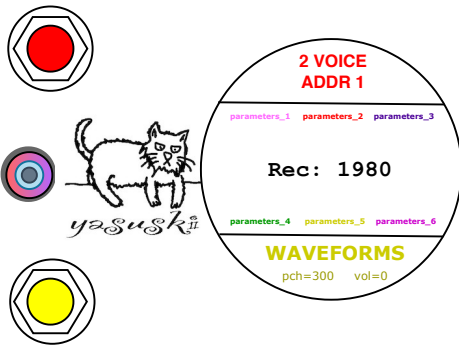

The AutoFade mode is activated by HOLDING the top switch on the right side. The fundamental status of the AutoFade is Fixed output level. Then click the top switch on the left side start AM modulation. The modulation speed is varies from the distance between the "left hand position" and the Volume antenna.

 In the Chromatic mode, the top switch on the left side does not working as start/stop switch for AM modulation.

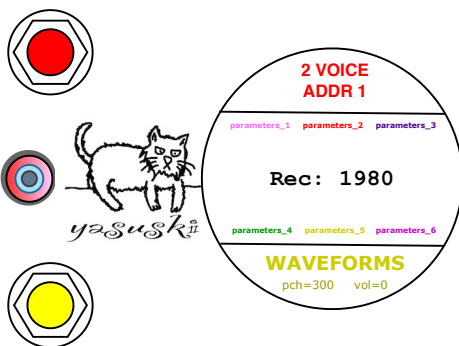

The LED on the eyeball switch start flashing when the AM modulation is activated.

The AM modulation is stopped when the top switch on the left side is clicked. The output level is fixed as the value of the AM modulation in the moment.