



The Parameters on the Lower Knob (contin'd)

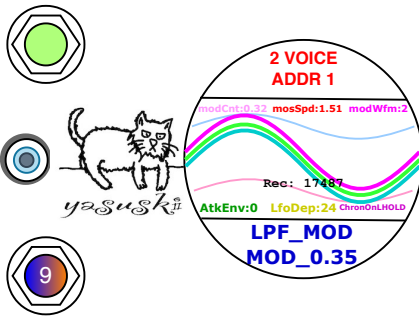

Click the lower knob then the parameter is moved to :
LPF Frequency / LPF Modulation / Flanger / Chorus / Dub
Rate controller mode.


The function is switched by turning the upper knob.

*When the Sequencer mode is selected, this stage is
assigned to the parameter "Sequence Speed".

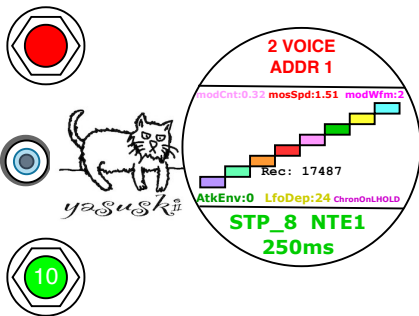


Click the lower knob then the parameter is moved to :
speed control for the Arpeggiator.

The arp speed is controlled by turning the lower knob.

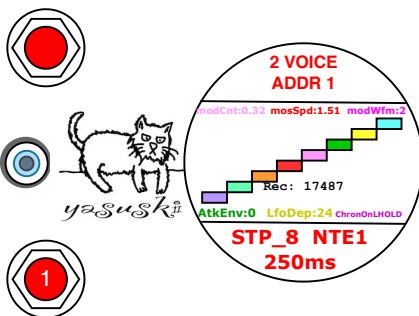


Click the lower knob then the parameter is moved to :
Pattern selector (Up / Alternate / Down / Random)
for the Arpeggiator.

The arp pattern is switched by turning the lower knob.

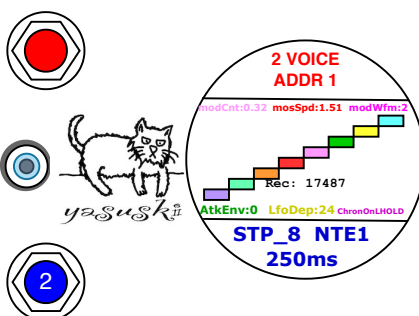

Click the lower knob then the parameter is moved to :
Note pattern selector (17 preset with 15 editable notes)
for the Arpeggiator. The preset notes are written in the file
by the C#SV format on the microSD.

The arp notes is switched by turning the lower knob.

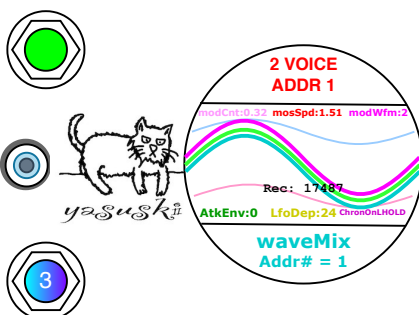

Click the lower knob then the parameter is moved to :
Waveform Mix Selector / Edit mode. (the 14 preset with 18
editable waveform mix) The parameters (32 wavetables with
5 levels) controlled by the upper knob is changed by clicking
the upper
knob, then turning the knob for selecting / changing the values.

The waveform mix memory address is switched by turning the
lower knob.