

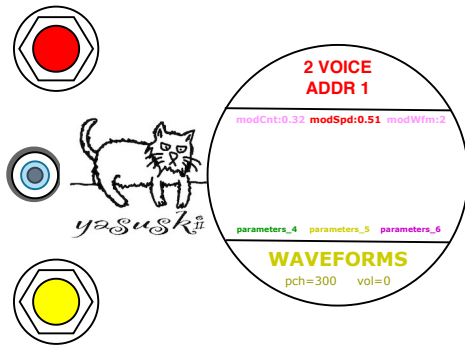


The CombFilter

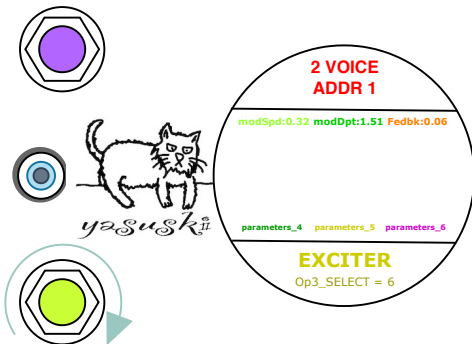


Click the lower knob from the neutral position (yellow) to enter EXCITER mode. The LED on the upper knob lights up in SkyBlue / DarkCyan / Orange color, which means the knob is accessing to the preset selector of the EXCITER.


Click the upper knob to move to the Delay controller (color changes to Leaf). The lower knob changes to the effect mode selector. Turn the knob until the LED turns to Green to select the Feedback control for the comb filter. Then the upper knob accepts to feedback level for the comb filter.

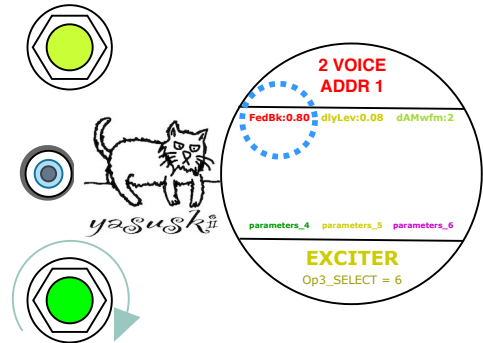

Click the upper knob to move to the LPF controller (color changes to Magenta). The lower knob changes to the effect mode selector. Turn the lower knob until the LED turns to Leaf to select the flanger. Then the upper knob accepts to LFO speed.

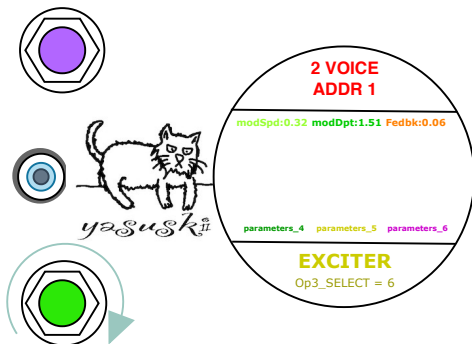

Turn the lower knob until the LED turns to Green to select the chorus. Then the upper knob accepts to LFO depth.

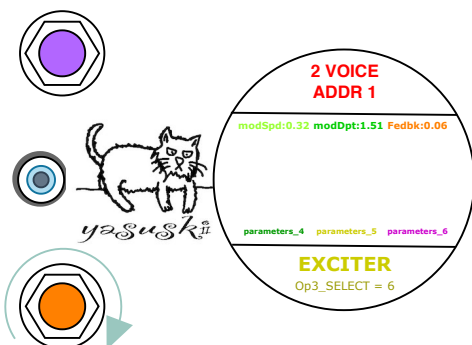

Turn the lower knob until the LED turns to Orange to select the chorus. Then the upper knob accepts to feedback of the combFilter.