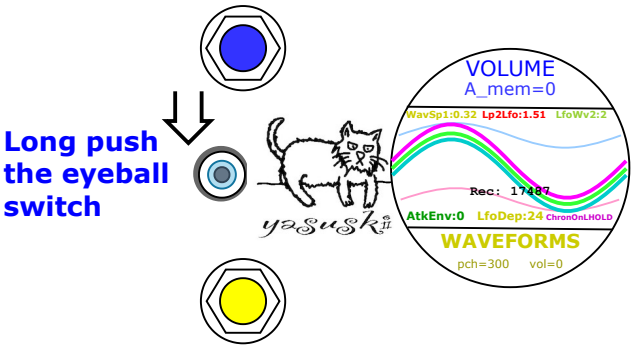

Select: the 2nd position in Upper Encoder Mode2

Moving the left hand toward the near position

BLU Upper Enc. turns RED when in range

No → Adjust the Top Pot till the LED turns RED

Yes

Moving the left hand toward the afar position

Yes

BLU Upper Enc. turns RED when in range

No → Adjust the Top Pot till the LED turns RED

Yes

Recheck the sensing area of the Vol ANT. until getting the best position

Adjusting the Upper Rotary Encoder For getting the precise control area

Long Push the Upper Encoder Top for saving the Volume offset value

Offset Setting Work Complete

Yes → Single Click the Eyeball Switch for Back to the PLAY MODE

No

Long Push the Eyeball Switch for Moving to the THIRD STAGE