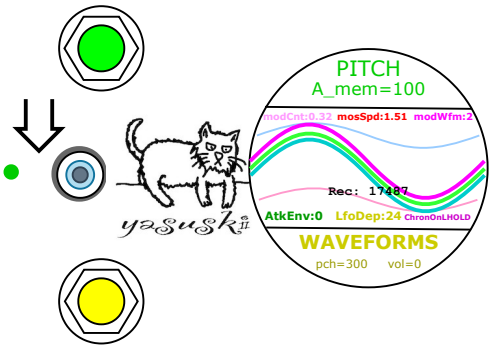

Select: the 1st position in Upper Encoder Mode2

Long Push the EyeBall Button

Moving the right hand toward the near position

Yes

GRN Top Konb turns RED when in range

No

Adjust the Bottom Pot till the LED turns RED

Yes

Adjusting the Upper Rotary Encoder For getting the precise control area

Recheck the sensing area of the Pitch ANT. until getting the best position

Long Push the Upper Encoder Top for saving the offset value

Offset Setting Work Complete

Yes

Single Click the Eyeball Switch for Back to the PLAY MODE

No

Long Push the Eyeball Switch for Moving to the SECOND STAGE